



Digital Luggage Scale

User Manual

Installing the battery

1. Open the battery compartment on the underside of the scale
2. Insert battery (1x CR2032 lithium) paying attention to the polarity signs inside the battery compartment.
3. Close the battery compartment.

Set up

1. Hang the scale in an upright position and press the power button 
2. Keep pressing the power button  to select your preferred unit of weight.
kg = Kilograms / g = Grams / lb = Pounds / oz = Ounces
3. The screen will read "0.00" which indicates the scale is now ready to be used.

Caution: The Digital Luggage Scale is not designed for and should not be used to weigh animals, babies or children. If you have back problems or any health issues regarding the safe lifting of items, please restrain from using the Digital Luggage Scale to weigh heavy items. Always remember to take care and use correct form whilst lifting.

Using the strap

1. Unclip the buckle or hook.
2. Locate a handle or fixing on the item of luggage that is suitable for the scale's strap to connect. Please ensure that the fixing is centrally located and strong enough to support the entire weight of the item.
3. Securely fix the strap by passing it under the handle or fixing and closing the buckle. Please ensure the buckle is securely closed prior to lifting.

Weighing

1. After correctly securing the luggage to the scale, gently lift the scale and a reading will be shown on the LCD display.
2. Once the luggage is stable, the LCD display will read "HOLD" and the data will be automatically memorized.


Please note: If the item is heavier than the scale can stand, the LCD will show "O_Ld". Please try to lose some weight from the luggage to ensure the overload item / luggage will not harm the scale.

Power off

1. Shortly Press the power button  to turn the scale off.

Please note: The scale has an automatic power off function which will shut off the device after 60 seconds of inactivity.

Notes

1. When powering on the scale, please ensure to keep it in an upright position.
2. To ensure the accuracy, make sure to grip the handle tightly when weighing, and avoid interfering with any other part of the device or item being weighed.
3. Avoid any heavy impacts or rough treatment to the device.
4. To clean the device, use a soft cloth only. Do not use any chemical detergents for cleaning.
5. If the display reads , this indicates low power. Please ensure to replace the battery immediately.
6. For long-term storage of the device, please remove the battery to eliminate any risks of leakage.
7. Should you encounter any problems, please report it immediately to the manufacturer. Do not try to repair the device.
8. Do not immerse the scale in water.
9. Do not dispose of batteries in fire as they may explode or leak.